



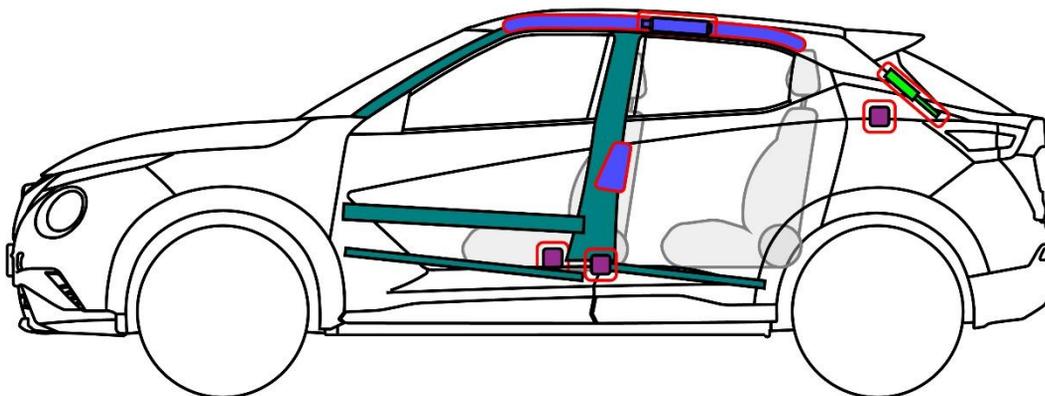

NISSAN

Juke

TYPE: F16, 5-doors SUV
(2019 -)

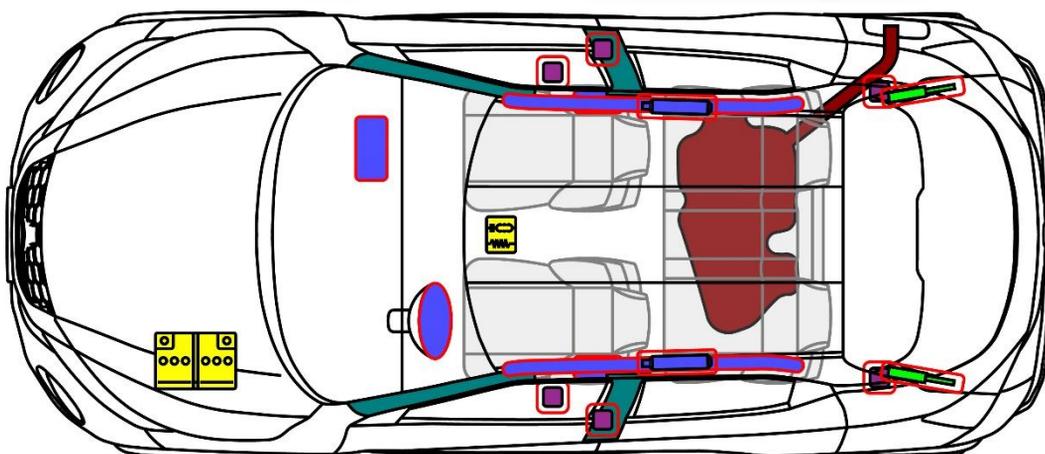

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra-capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high voltage		High voltage power cable / component		High voltage device that disconnects High voltage		Fuse box disabling high voltage		High voltage ultra-capacitor,
	Fuel tank content Gasoline / Ethanol								

1. Identification / recognition




2. Immobilization / stabilization / lifting

Immobilize vehicle:

1. Block wheels
2. For automatic transmission select the P (park) position
3. Set parking brake
4. Press start/stop button



Lifting points


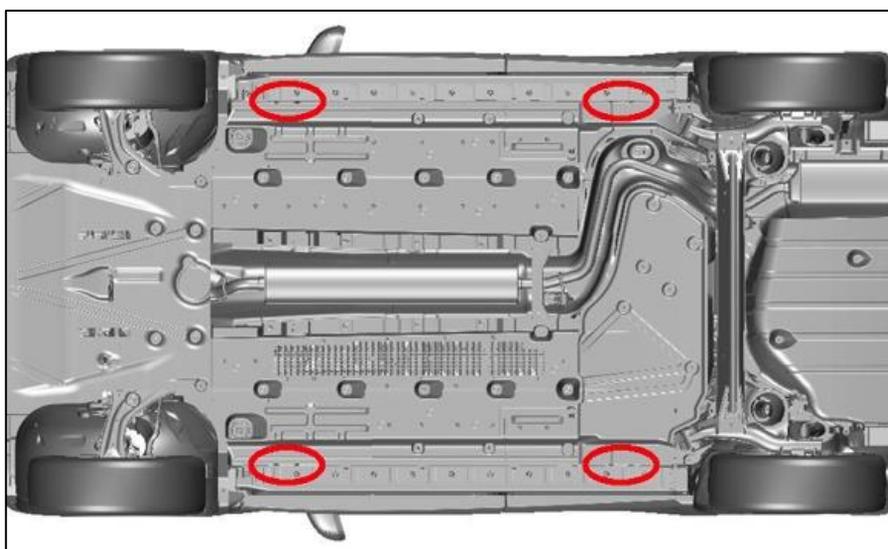


3. Disable direct hazards / safety regulations

Access to the engine compartment




Disconnect the 12 Volts battery

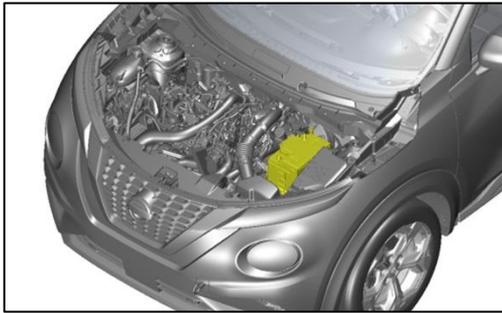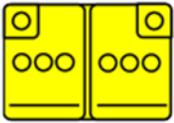


1. Switch off the ignition
2. Disconnect the negative terminal (-)
3. Disconnect the positive terminal (+)

4. Access to the occupants


High strength steel in body

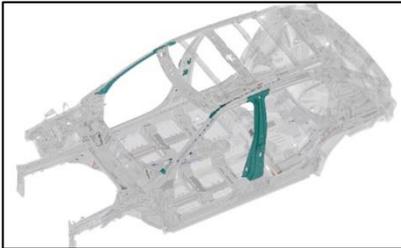

High strength steel in door

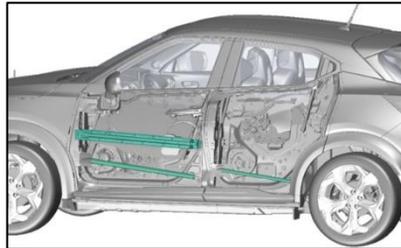

Steering column adjustment

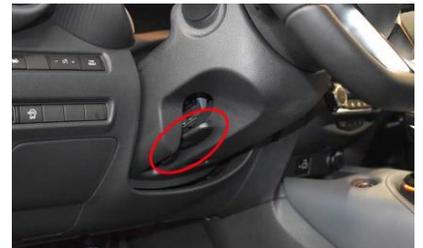

Seat adjustment

 


Glass types:

- A. Laminated glass.
- B. Tempered glass.



5. Stored energy / liquids / gases / solids

	12V	 
	R-1234yf 450 ±25 g	   
	46 L	 


6. In case of fire



USE WATER



GAS STRUT, RISK OF MISSILE EFFECT

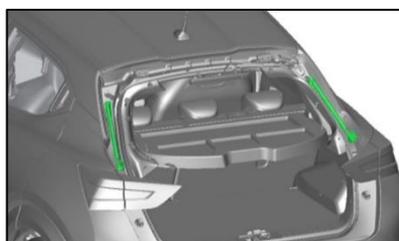

8. Towing / transportation / storage

Recovery hook storage



 
Location front hook



Location rear hook



Towing precautions



10. Explanation of pictograms used

	General warning sign		Flammable
	Warning; low temperature		Hazardous to the human health
	Air-conditioning component		Explosive
	Hybrid Electric Vehicle on fuel of liquid gr. 2		Corrosives
	Bonnet		Use water to extinguish the fire